

Hand-Operated Pump

Description

The major components of the pump assembly in the 7530 model series consist of a:

- hand-operated reciprocating pump
- bung adapter
- nozzle assembly with delivery hose (model 7535-4)
- loader coupler (model 7539-4)

Models 7535-4 and 7539-4

Pump model 7535-4 is accessorized to dispense gear oils from their original 55-gallon drums. See **Figure 1**.

Model 7539-4 contains a loader coupler to dispense grease from 400-pound drums.

A loader fitting is also included. It must be used in place of an existing fitting to ensure compatibility.

Pump Delivery

Oil versus Grease


The pump delivers approximately 1 quart (0.95 liter) of oil in ten strokes.

Grease is delivered in a quantity of approximately 1 pound (0.45 kg) in six strokes.*

Model Assembly

Refer to **Figure 2** for details on the assembly of all packaged components.

* In cold environments, the delivery is approximately 1 pound (0.45 kg) in

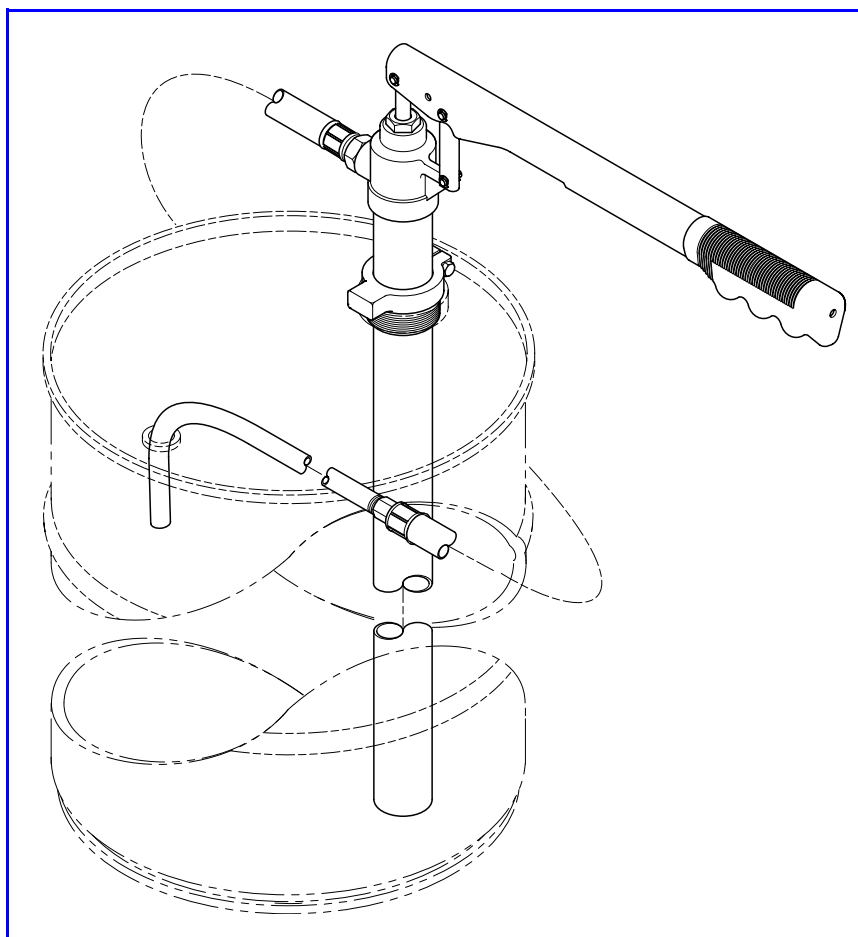

Pump Model	Product	Nozzle and Hose Assembly	Loader Coupler	Overall Height (including Drum)	
				Inches	Meters
7535-4	Oil	●		41-1/2	1.05
7539-4	Grease		●	43-1/4	1.09

Figure 1 Hand-Operated Pump Models 7535-4 and 7539-4
Model 7535-4 Shown

Accessories

Model Number	Cover	Dolly	Follower Plate
7535-4	-	336899	-
7539-4	318040-4		338923

Alemite Corporation
167 Rowland Avenue, Johnson City, Tennessee 37601
www.alemite.com

Copyright © 2003 by Alemite Corporation

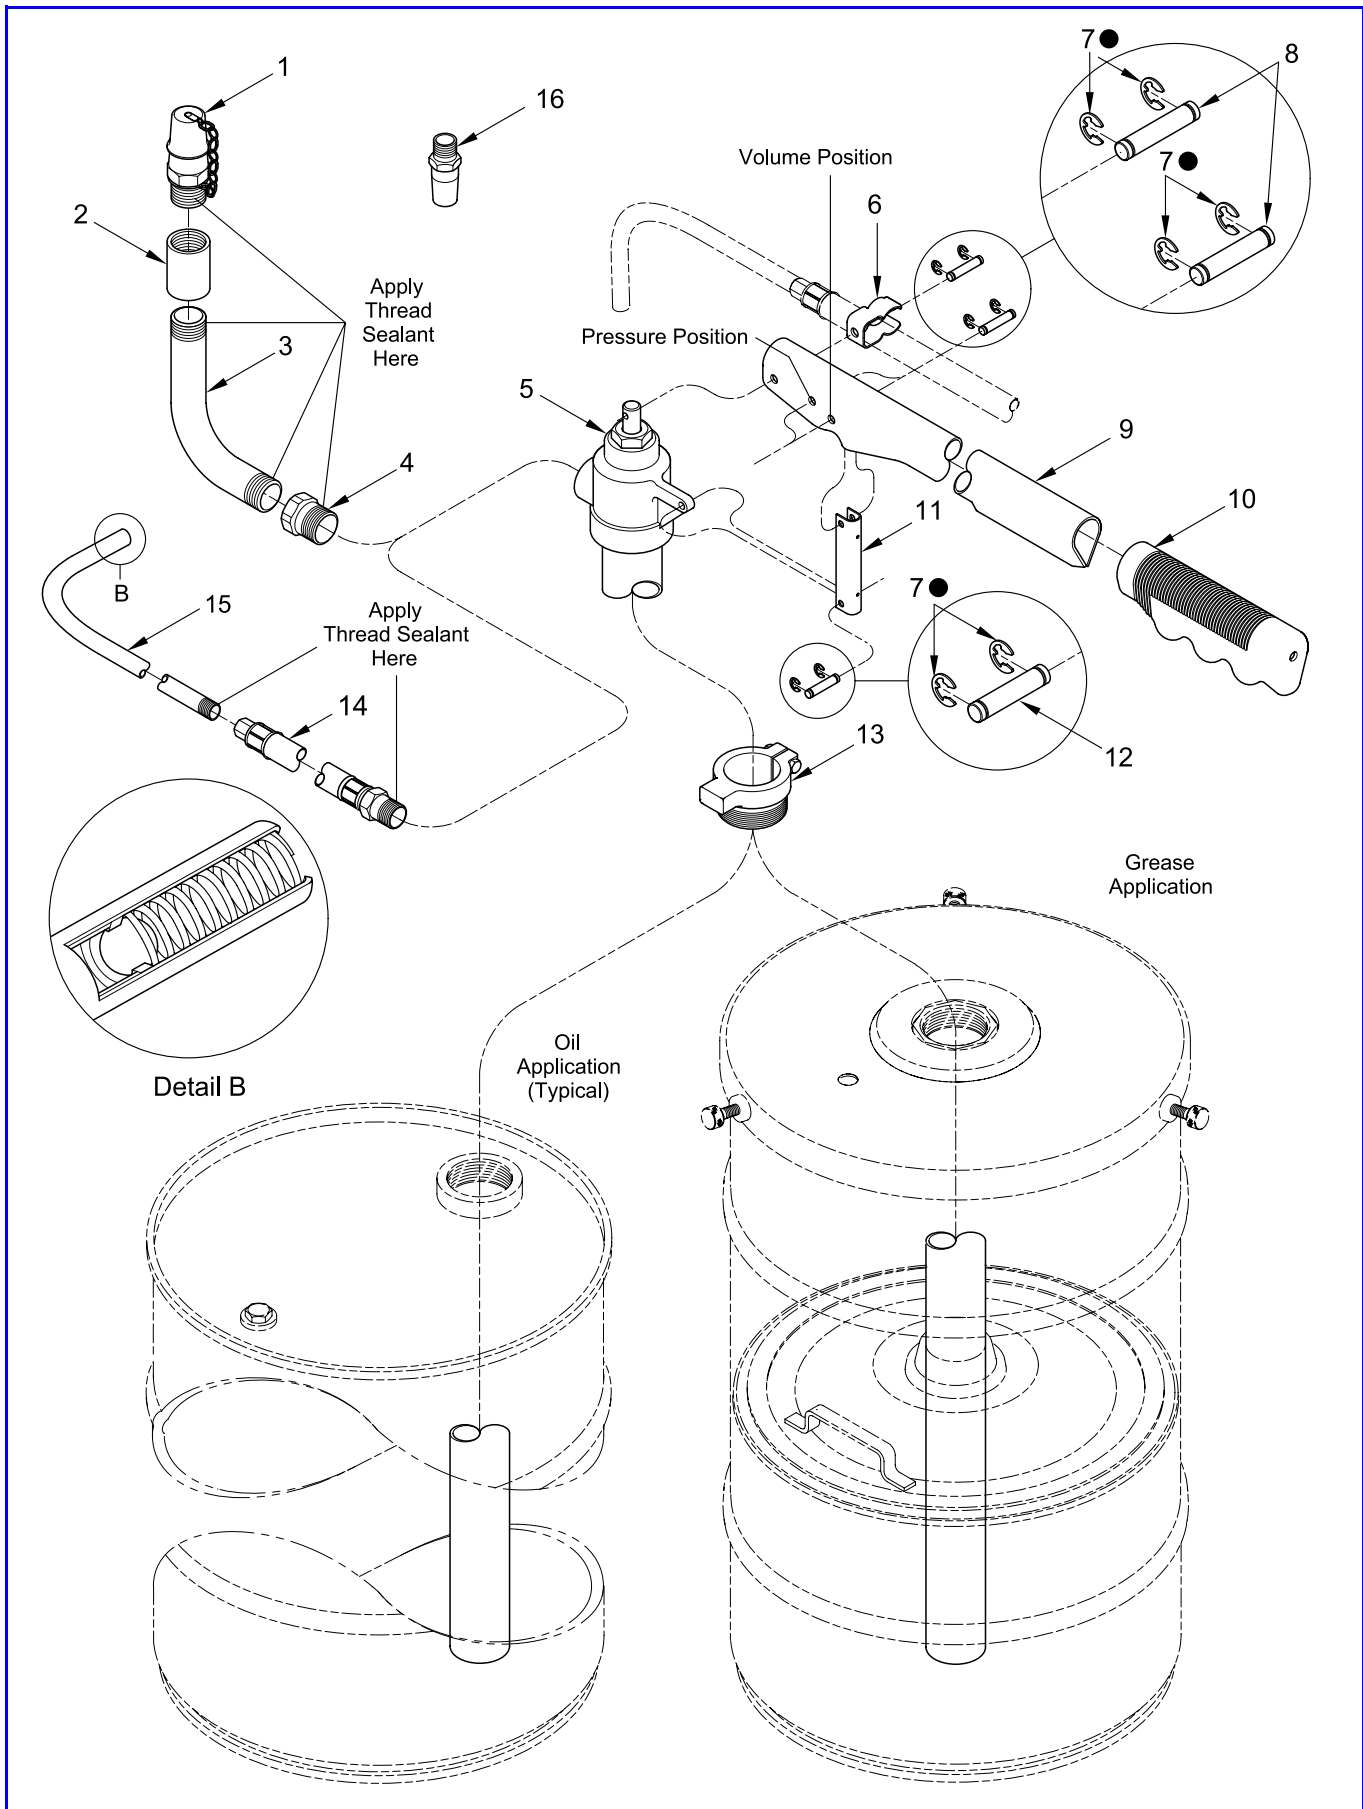


Figure 2 Hand-Operated Pump Model 7530 Series - Exploded View

Item No.	Part No.	Description	Qty	Notes	Numeric Order Part # (Item #)	
	317219	Adapter and Elbow Assembly, Loader	1	Model 7539-4 Only	131586	(4)
1	306741	Coupler Assembly, 3/8 " NPTF (m)	1	Model 7539-4 Only	<i>171606</i>	(7)
2		Coupling, 3/8 " NPTF (f)	1	Model 7539-4 Only	<i>305378</i>	(6)
3	317256	Elbow, 3/8 " NPTF (m)	1	Model 7539-4 Only	306610	(15)
4	131586	Bushing, 3/8 " NPTF (f) x 1/2 " NPTF (m)	1	Model 7539-4 Only	B306740	(16)
5		Tube Assembly, Pump	1	See Figure 3	306741	(1)
6		Clip, Spring	1	Model 7535-4 Only	<i>309702</i>	(2)
7		Ring, Retaining	6	●	316320	(9)
8	339961-2	Pin	2		317219	
9	316320	Lever	1		317256	(3)
10		Grip	1		317809-5F	(14)
11	328253-3	Link	1		326750-E1	(13)
12	339961-1	Pin	1		328253-3	(11)
13	326750-E1	Adapter Assembly, Bung, 2 " NPTF (m)	1		<i>328260-4</i>	(5)
14	317809-5F	Hose, Material, 1/2 " ID (5-1/2 ' Long)	1	Model 7535-4 Only	<i>338334</i>	(10)
15	306610	Nozzle Assembly	1	Model 7535-4 Only	339961-1	(12)
16	B306740	Fitting, Loader	1	Model 7539-4 Only	339961-2	(8)
Legend: Part numbers left blank (or in <i>italics</i>) are not available separately ● designates a repair kit item						

Repair Kit

Part No.	Kit Symbol	Description
394261-1	●	Kit, Repair (Includes items on Figure 2 and Figure 3)

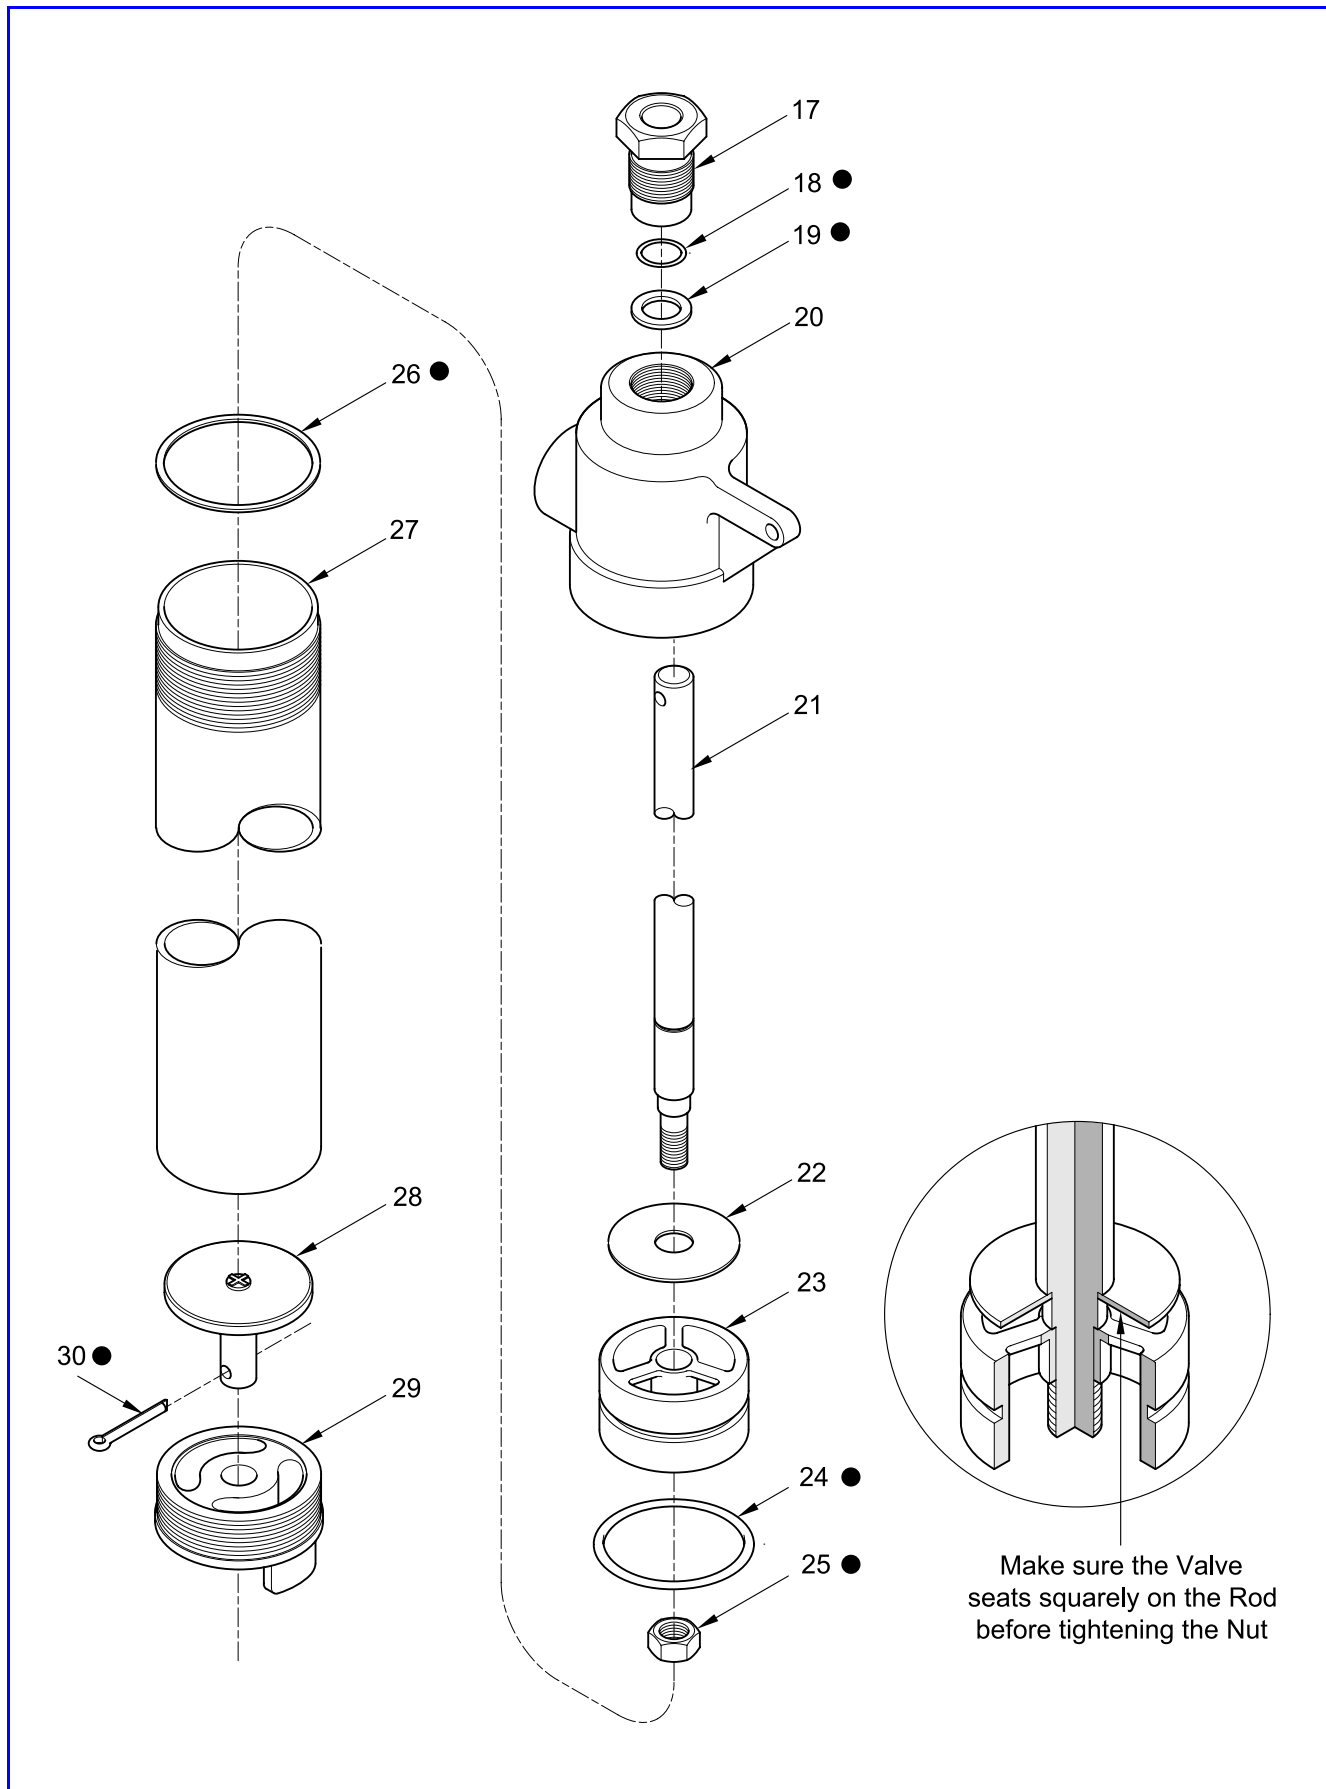


Figure 3 Pump Tube Assembly for Model 7530 Series - Exploded View

Item No.	Part No.	Description	Qty	Notes	Numeric Order Part # (Item #)	
17	324733	Nut, Packing	1		17070	(25)
18		O-Ring, 1/2 " ID x 5/8 " OD	1	●	50712	(29)
19		Gasket	1	●	131315	(28)
20	326067-2	Body, Outlet	1		131472	(26)
21	328257-4	Rod	1		171001-23	(24)
22	324747	Valve, Upper	1		171009-2	(18)
23		Body, Plunger	1		172212-14	(30)
24		O-Ring, 1-1/4 " ID x 1-1/2 " OD	1	●	319320	(23)
25		Nut, Elastic Stop, 5/16 " -18	1	●	324733	(17)
26		Gasket	1	●	324747	(22)
27	328256-4	Tube	1		326067-2	(20)
28	131315	Valve, Foot	1		326784	(19)
29	50712	Body, Foot Valve	1		328256-4	(27)
30		Pin, Cotter, 3/32 " x 5/8 " Long	1	●	328257-4	(21)
Legend: Part numbers left blank (or in <i>italics</i>) are not available separately ● designates a repair kit item						

Repair Kit

Part No.	Kit Symbol	Description
394261-1	●	Kit, Repair (Includes items on Figure 3 and Figure 2)

Hand-Operated Loader Pump

Hand-Operated pump model 7539-4 contains a loader coupler for loading lever-operated hand guns.

CAUTION

The Loader Fitting on the lever gun must mate with the Loader Coupler. The pump will not operate if the components are not compatible.

Lever guns equipped with an **Alemite** loader fitting can connect directly to the loader pump.

Non-compatible loader fittings must be replaced with the included loader fitting.

NOTE: Optional loader fitting B322610 is available for fibrous or heavy greases.

Loading Operation

1. Make sure the follower rod on the hand gun is engaged with the back-up plate.
2. Remove the cap on the pump's loader coupler.
3. Seat the Loader Fitting into the loader coupler. See **Figure 4**.
4. Operate the pump and view the movement of the follower rod.
5. Discontinue pump operation once the groove on the follower rod is visible.

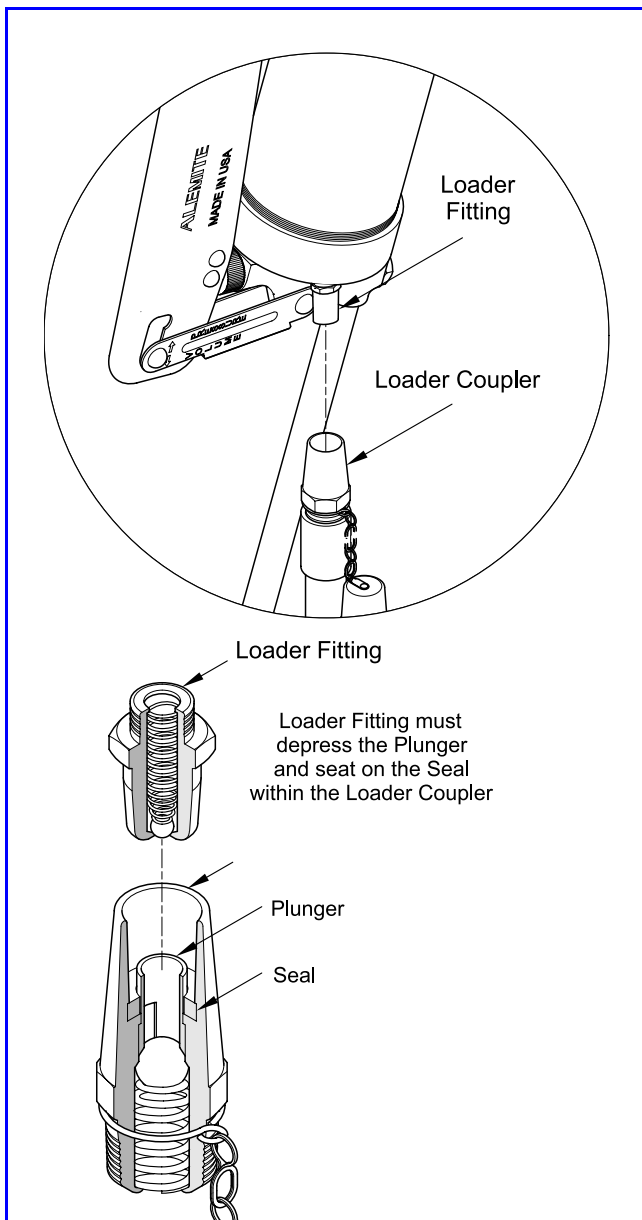


Figure 4 *Loader Fitting and Loader Coupler
Section View*

Overhaul

Prior to performing any maintenance procedure, the following safety precautions must be observed. Personal injury may occur.



WARNING

Do not use halogenated hydrocarbon solvents such as methylene chloride or 1,1,1-trichloroethane in this pump. An explosion can result within an enclosed device capable of containing pressure when aluminum and/or zinc-plated parts in the pump come in contact with halogenated hydrocarbon solvents.

Never point a control valve at any portion of your body or another person. Accidental discharge of pressure and/or material can result in injury.

Read each step of the instructions carefully. Make sure a proper understanding is achieved before proceeding.

Disassembly

NOTE: Refer to **Figure 2** for component identification on the following procedures.

Separate Pump Tube from Lever

1. Unscrew Material Hose (14) from Pump Tube Assembly (5) [model 7535-4 only].
 - Unscrew Nozzle Assembly (15) from the Material Hose as required.
2. Loosen the screw that secures Bung Adapter (13) to the Pump Tube Assembly.
 - Remove the Pump Tube Assembly from the drum.
3. Unscrew Elbow (3) from the Pump Tube Assembly [model 7539-4 only].
 - Disassemble the Loader Adapter and Elbow Assembly as required.
4. Remove Retaining Rings (7) from one end of Pins (8) and Pin (12).
5. Remove the Pins that secure Lever (9) to Pump Tube Assembly (5) and Link (11).
 - Remove Spring Clip (6).
6. Remove the Pin that secures the Link to the Pump Tube Assembly.

Pump Tube

NOTE: Refer to **Figure 3** for component identification on the pump tube procedures.

7. Remove Bushing (4) from Outlet Body (20) as necessary [model 7539-4 only].
8. Unscrew Tube (27) from the Outlet Body.
9. Remove the Tube from the inner components of the Pump Tube Assembly.

Foot Valve Body

10. Unscrew Foot Valve Body (29) from the Tube.
11. Remove Cotter Pin (30) from Foot Valve (28).
12. Remove the Foot Valve from the Foot Valve Body.

Outlet Body

13. Remove the Rod assembly from the Outlet Body.
14. Remove Gasket (26) from the Outlet Body.
15. Unscrew Packing Nut (17) from the Outlet Body.
 - Remove Gasket (19) and O-Ring (18).

Rod Assembly

16. Unscrew Nut (25) from Rod (21).
17. Remove Plunger Body (23) and Valve (22) from the Rod.
18. Remove O-Ring (24) from the Plunger Body.

Clean and Inspect

NOTE: Use the repair kit for replacement parts. Make sure all the components are included in the kit before discarding used parts.

1. Clean all metal parts in cleaning solvent. The solvent should be environmentally safe.
2. Inspect all parts for wear and/or damage.
 - Replace as necessary.
3. Inspect Rod (21) closely. Use a magnifying glass to detect any score marks.
 - Replace as necessary.
4. Closely inspect the mating surfaces of all check valve components for any imperfections. Ensure a smooth and clean contact is obtained when assembled.

Assembly

NOTE: Prior to assembly, certain components require lubrication in clean oil. Refer to **Table 2** for details.

Foot Valve Body

NOTE: Refer to **Figure 5** for a section view of the pump tube assembly.

1. Install Foot Valve (28) into the top of Foot Valve Body (29).
2. Install Cotter Pin (30) into the Foot Valve.
3. Screw the Foot Valve Body assembly into the bottom of Tube (27).
 - Do not tighten at this time.

Rod Assembly

4. Install Valve (22) and Plunger Body (23) [ribs upward] onto the bottom of Rod (21).

CAUTION

Make sure Valve (22) seats properly on Rod (21). Damage to components can occur. See Figure 3.

5. Screw Nut (25) onto the Rod.
 - Tighten the Nut securely.
6. Install O-Ring (24) onto the Plunger Body.

Outlet Body

7. Install and seat Gasket (26) into the bottom of Outlet Body (20).
8. Install the Rod assembly into the Outlet Body.
9. Install and seat Gasket (19) into the Outlet Body.
10. Install O-Ring (18) carefully past the cross-hole on the Rod.
11. Screw Packing Nut (17) into the Outlet Body.
 - Tighten the Packing Nut securely.
12. Install the Tube assembly over the Rod assembly and screw into the Outlet Body.

Item No.	Description
18	O-Ring, 1/2 " ID x 5/8 " OD
24	O-Ring, 1-1/4 " ID x 1-1/2 " OD

Table 2 Components Lubricated in Clean Oil

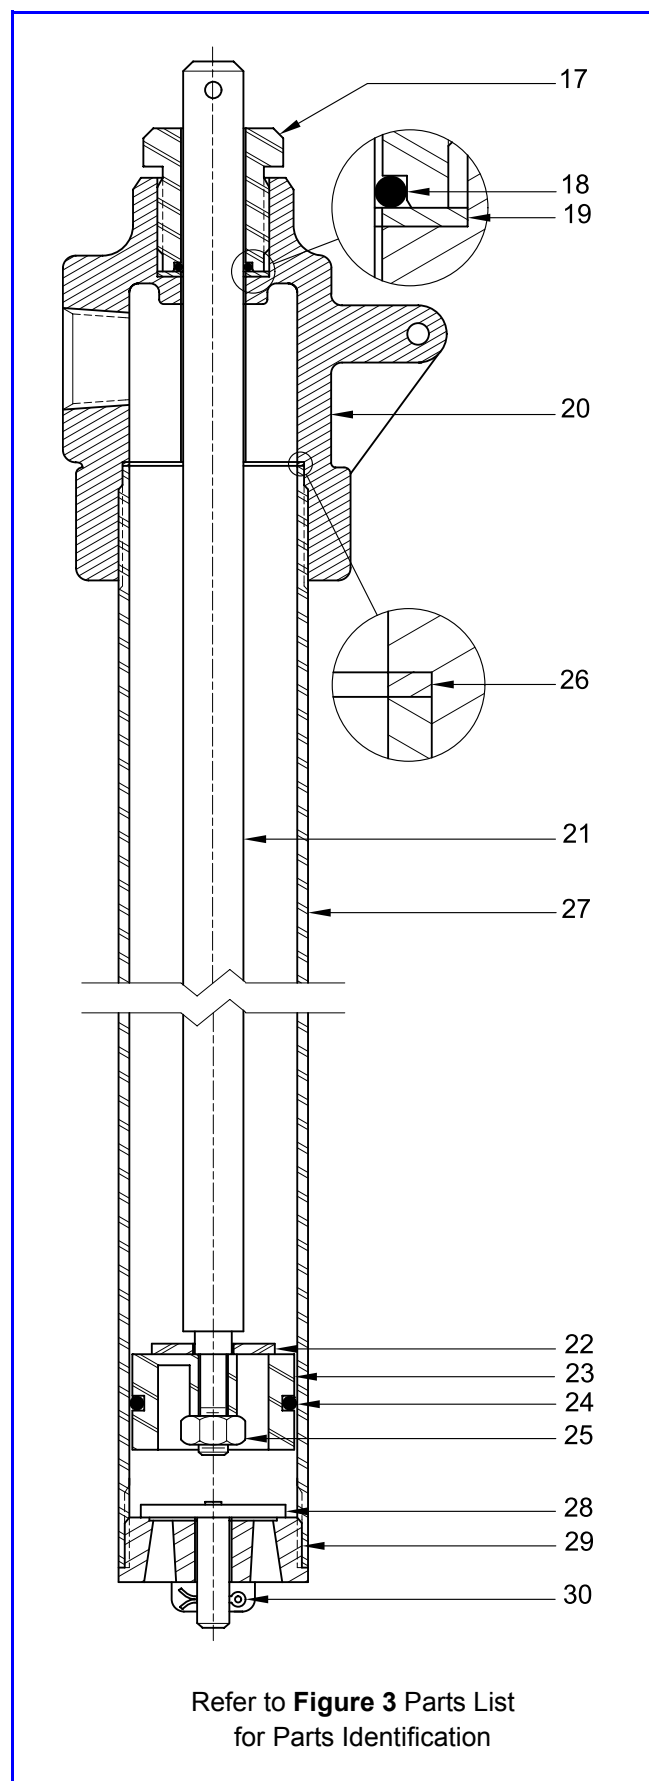


Figure 5 Pump Tube Assembly 328260-4 - Section View

13. Tighten the Tube securely into the Outlet Body and at the same time the Foot Valve Body into the Tube.

Attach Pump Tube to Lever

14. Install Pin (12) that secures Link (11) to Pump Tube Assembly (5).
15. Install Pins (8) that secures Lever (9) to the Pump Tube and Link.
 - Make sure to install Spring Clip (6) in the proper position on the Lever. See **Figure 2**.
16. Install Retaining Rings (7) onto the ends of all Pins.

NOTE: Procedures 17 through 20 are applicable to model 7539-4 only.
17. Screw Bushing (4) [with thread sealant] into the Outlet Body.
 - Tighten the Bushing securely.
18. Screw Elbow (3) [with thread sealant on both ends] into the Bushing.
 - Tighten the Elbow securely.
19. Screw Coupling (2) onto the Elbow.
 - Tighten the Coupling securely.
20. Screw Coupler Assembly (1) [with thread sealant] into the Coupling.
 - Tighten the Coupler securely.
21. Place the follower plate onto the top of the product [model 7539-4 only].
 - With a wobbling motion, eliminate any air that may be trapped underneath the plate by forcing the product through the hole in the center.
22. Install Bung Adapter (13) onto the cover as necessary (optional for model 7535-4).

23. Install the Pump Tube Assembly into the Bung Adapter.
 - Guide the pump tube into the follower plate [model 7539-4 only].
 - Make sure the pump is oriented properly.
24. Secure the cover to the drum (optional for model 7535-4).
25. Position the Pump Tube Assembly to the correct height in the Bung Adapter.
 - Tighten the screw on the Bung Adapter securely.
26. Screw Material Hose (14) [with thread sealant] into the Outlet Body [model 7535-4 only].
 - Tighten the Hose securely.

27. Screw Nozzle Assembly (15) [with thread sealant] into the Material Hose [model 7535-4 only].
 - Tighten the Nozzle Assembly securely.

Priming the Pump

NOTE: The following procedures are for priming grease (model 7539-4 only).

1. Remove the cap on Coupler Assembly (1).
2. With a suitable tool, depress the plunger in the Coupler Assembly. See **Figure 4**.
3. Cycle the Lever until grease is visible at the Coupler Assembly.

If the pump assembly does not prime, refer to the **Troubleshooting Chart** for details.

4. Continue to cycle the pump until the grease is free of air.

Troubleshooting Chart

Pump Indications	Possible Problems	Solution
Pump does not cycle	Pump tube jammed and/or contains loose components	Rebuild pump tube
Pump will not prime	Pump leaking internally	See Internal Leaks
Pump cycles easily	Product source empty	Replenish product
External Leaks		
Product leakage visible at Packing Nut (17)	1. Worn or damaged O-Ring (18) 2. Damaged Gasket (19)	1. Replace O-Ring (18) 2. Replace Gasket (19)
Product leakage at bottom of Outlet Body (20)	1. Tube (27) not sufficiently tight 2. Damaged Gasket (26)	1. Tighten Tube (27) into Outlet Body (20) 2. Separate Tube (27) from Outlet Body (20) and replace Gasket (26)
Internal Leaks		
Pump does not prime	1. Foreign material between Valve (22) and Plunger Body (23) 2. Foreign material between Foot Valve (28) and Foot Valve Body (29) 3. Worn or damaged Valve (22) 4. Worn or damaged Plunger Body (23) 5. Worn or damaged Foot Valve (28) 6. Worn or damaged Foot Valve Body (29) 7. Worn or damaged O-Ring (24)	Locate and eliminate source of foreign material Disassemble pump tube, clean, inspect, and replace worn or damaged components

Changes Since Last Printing

Replaced Cotter Pins with Retaining Rings