

## VKJP 01000 Technical Bulletin - July 2010




Passenger cars

Technical information: VKJP 01000



Universal cut-to-size boot for CV-Joints with outer diameter from 57 mm up to 120 mm.

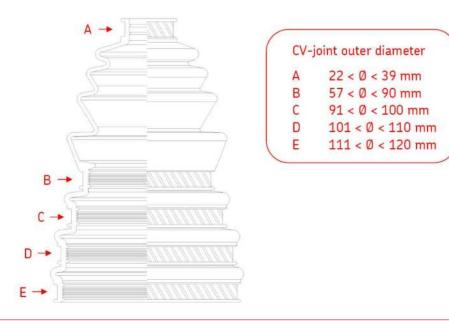


When fitting the universal boot onto the CV-Joint, it is recommended to cut the boot to size after having tightened the clamp.





For a professional repair, when tightening the clamps it is recommended to use the specific tool. Incorrect tightening of the clamps can cause premature failure of the CV-Joint.





© SKF Group 2010

© SRF Group 2010 The contents of this publication are the copyright of the publisher and may not be reproduced (even extracts) unless written permission is granted. Every care has been taken to ensure the accuracy of the information contained in this publication but no liability can be accepted for any loss or damage whether direct, indirect or consequential arising out of the use of the information contained herein.

